

# CONFORMITY DECLARATION

We, VYRTYCH a.s. on base of tests provided by Accredited testing laboratory No 1206 for physical factors of State Health Institute hereby declare the conformity with norm

## ČSN EN ISO 14644-1

Clean rooms and corresponded controlled areas – Classification of air cleanness according to particles concentration for LUMINAIRES series:

### FILA-N-LED

meets the requirements for clean areas

## CLASS 5, 6, 7, 8 and 9

according to above mentioned norm

ISO Classification number (n)	Maximum concentration limits (particles/m <sup>3</sup> of air) for particles equal to and larger than the considered snes shown below					
	0,1µm	0,2µm	0,3µm	0,5µm	1µm	5µm
ISO Class 1	10	2				
ISO Class 2	100	24	10	4		
ISO Class 3	1000	237	102	35	8	
<b>ISO Class 4</b>	10000	2370	1020	352	83	
<b>ISO Class 5</b>	100000	23700	10200	3520	832	29
<b>ISO Class 6</b>	1000000	237000	102000	35200	8320	293
<b>ISO Class 7</b>				352000	83200	2930
<b>ISO Class 8</b>				3520000	832000	29300
<b>ISO Class 9</b>				35200000	8320000	293000

Supplement :


Accredited testing report No 1.6./ČP/22/19 – MEASUREMENT OF SOLID VAPOUR PARTICLES NUMBER

**VYRTYCH**<sup>15</sup>

VYRTYCH a.s., Židněves 116  
294 06 Březno, Česká republika  
IČO: 27862470, DIČ CZ27862470

.....  
  
Petr Beneš  
Head of technical department

Židněves, 05.01.2023

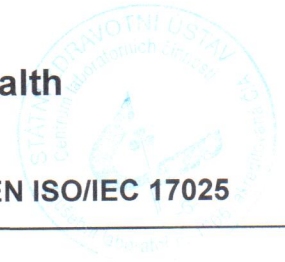

## Test Report No. 1.6/ČP/22/19

### Measurement of the number of particles of determinate aerosol in air

Expertise No.: EX 221361, SZÚ/15078/2022  
Costumer: VYRTYCH a. s., Židněves 116, 294 06 Březno  
Date of measurement: 3. – 4.11.2022  
Reason of measurement: **Verification of luminaires for clean rooms**  
– Manufacturer VYRTYCH a.s.  
Place of measurement: Operating room Klinika Dr. Pírka, Mladá Boleslav  
Measurement performed by: Ing. Z. Mathauserová, J. Kořízková - NIPH

#### Test method and evaluation

The test method of measuring dustiness in clean rooms was used, i. e. determining of the number of solid aerosol particles with dimensions  $\geq 0,5 \mu\text{m}$  and  $\geq 5,0 \mu\text{m}$  accordance to Annex B of ČSN EN ISO 14644-1:2019 Cleanrooms and associated controlled environments - Part 1: Classification of air cleanliness by particle concentration and accordance to the document of the Laboratory for Physical Factors – SOP No.2/1.6 Determination of cleanliness classes defined cleanroom.

One measurement (one data reading on the measuring device) is a two-minute sampling of air at an air flow through a particle counter of  $1 \text{ft}^3 / \text{min}$  - the results are converted to a volume of  $1 \text{m}^3$  of air according to the requirements of the standard

A clean room without installed item-by-item luminaires was monitored, after verifying the cleanliness class of the operating room, luminaires *FILA-N-LED-2,21-OP-10000-236-4K*, *NORD-N-LED-CG-5100-236-G2-4K*, *NORD-N-LED-OPG-10000-236-G2-4K*, *BORDER-N-LED-SQ-OP-7000-4K*, *ODIS-LED-SQ-OP-7600-4K*, *HOOVER/3-LED-SQ-MP-7100-4K*, *HOOVER/3-LED-SQ-GLM-7100-4K*, *HOOVER4-LED-SQ-OP-6100-4K*, *HOOVER4-LED-SQ-MP-6100-4K*, *HOOVER4-LED-SQ-GLM-6100-4K*, *HOUND/3-MAG-LED-SQ-GLM-5100-4K*, *HOUND4-MAG-LED-SQ-GLM-5300-4K* were placed and turned on. After an hour of operation of the luminaires, repeated measurement of the number of particles of determinate aerosol in air was performed - the conclusion follows from the comparison of the obtained data.

#### Used equipment:


**Particle counter - CI-200 model**, serial No. 034316, CC No. 6014-KL-C0067-21 from 23. 11. 2021, which determines and registers numbers of dust particles in 6 dimension intervals from 0,2 to  $10 \mu\text{m}$ .

**Place of measurement** was a clean room of the operating room with a verified cleanliness class 5 under the laminar air supply (except for the laminar cleanliness class 4/5) according to ČSN EN ISO 14644-1. The measurement took place "at rest", i.e. without no personnel present in the room.

#### Measurement results:

In Tab. 1 are the requirements for a clean room of cleanliness class 4 and 5 according to ČSN EN ISO 14644-1, Tab. 2 - 5 shows the measured values of the number of particles of determinate aerosol.



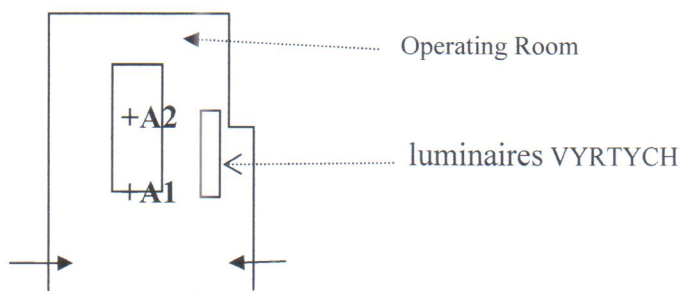

Scheme measurement

**Tab. 1: Requirements for cleanliness air according to ČSN EN ISO 14644-1 and Decree No. 84/2008 Coll.**

Cleanliness classes of air (at rest)	Number of particles in 1m <sup>3</sup> of air	
	≥ 0,5 μm	≥ 5,0 μm
4	352	-
5	3 520	29

**Tab. 2: Measured values** of the number of solid aerosol particles in the operating field where the luminaires *FILA-N-LED-2,21-OP-10000-236-4K*, *NORD-N-LED-CG-5100-236-G2-4K*, *NORD-N-LED-OPG-10000-236-G2-4K* were placed (3.11.2022).

Before installing the luminaire A1		A2		After installing the luminaire A1		A2	
Number of particles in 1ft <sup>3</sup> of size and larger 0,5 μm		Number of particles in 1ft <sup>3</sup> of size and larger 0,5 μm		Number of particles in 1ft <sup>3</sup> of size and larger 0,5 μm		Number of particles in 1ft <sup>3</sup> of size and larger 0,5 μm	
5,0 μm		5,0 μm		5,0 μm		5,0 μm	
4	0	6	1	3	0	4	1
5	1	8	1	3	0	4	1
4	0	2	0	6	0	6	1
3	0	2	0	4	0	2	0
4	1	4	1	3	1	3	0
<b>4</b>	<b>0</b>	<b>4</b>	<b>1</b>	<b>4</b>	<b>0</b>	<b>4</b>	<b>1</b>
Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>	
141	14	145	21	125	10	125	21

Note: Due to the very low measured values and the nature of test, uncertainty of measurement was not determined.



**Tab. 3: Measured values** of the number of solid aerosol particles in the operating field where the luminaires *BORDER-N-LED-SQ-OP-7000-4K*, *ODIS-LED-SQ-OP-7600-4K*, *HOOVER/3-LED-SQ-MP-7100-4K* were placed (3.11.2022).

Before installing the luminaire				After installing the luminaire			
A1		A2		A1		A2	
Number of particles in 1ft <sup>3</sup> of size and larger 0,5 µm		Number of particles in 1ft <sup>3</sup> of size and larger 5,0 µm		Number of particles in 1ft <sup>3</sup> of size and larger 0,5 µm		Number of particles in 1ft <sup>3</sup> of size and larger 5,0 µm	
5	0	8	1	3	0	4	0
6	1	6	0	3	0	7	2
4	0	2	0	1	0	7	1
3	0	4	2	4	0	3	0
5	1	3	0	8	1	2	0
<b>5</b>	<b>0</b>	<b>5</b>	<b>1</b>	<b>5</b>	<b>0</b>	<b>5</b>	<b>1</b>
Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>	
<b>171</b>	<b>14</b>	<b>153</b>	<b>21</b>	<b>171</b>	<b>10</b>	<b>153</b>	<b>21</b>

Note: Due to the very low measured values and the nature of test, uncertainty of measurement was not determined.

**Tab. 4: Measured values** of the number of solid aerosol particles in the operating field where the luminaires *HOOVER/3-LED-SQ-GLM-7100-4K*, *HOOVER4-LED-SQ-OP-6100-4K*, *HOOVER4-LED-SQ-MP-6100-4K* were placed (4.11.2022).


Before installing the luminaire				After installing the luminaire			
A1		A2		A1		A2	
Number of particles in 1ft <sup>3</sup> of size and larger 0,5 µm		Number of particles in 1ft <sup>3</sup> of size and larger 5,0 µm		Number of particles in 1ft <sup>3</sup> of size and larger 0,5 µm		Number of particles in 1ft <sup>3</sup> of size and larger 5,0 µm	
6	0	2	0	3	0	4	0
4	1	3	0	3	0	2	1
2	0	2	0	2	0	2	1
3	0	3	0	4	0	3	0
5	0	2	1	6	1	3	0
<b>4</b>	<b>0</b>	<b>2</b>	<b>0</b>	<b>4</b>	<b>0</b>	<b>3</b>	<b>0</b>
Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>	
<b>141</b>	<b>7</b>	<b>85</b>	<b>7</b>	<b>128</b>	<b>10</b>	<b>99</b>	<b>14</b>



**Tab. 5: Measured values** of the number of solid aerosol particles in the operating field where the luminaires *HOOVER4-LED-SQ-GLM-6100-4K*, *HOUND/3-MAG-LED-SQ-GLM-5100-4K*, *HOUND4-MAG-LED-SQ-GLM-5300-4K* were placed (4.11.2022).

Before installing the luminaire				After installing the luminaire			
A1		A2		A1		A2	
Number of particles in 1ft <sup>3</sup> of size and larger 0,5 µm		Number of particles in 1ft <sup>3</sup> of size and larger 5,0 µm		Number of particles in 1ft <sup>3</sup> of size and larger 0,5 µm		Number of particles in 1ft <sup>3</sup> of size and larger 5,0 µm	
4	0	7	1	3	1	4	0
6	1	2	1	3	0	6	0
2	0	5	0	1	0	6	2
3	0	1	0	4	0	2	0
5	1	4	1	6	1	3	1
<b>5</b>	<b>0</b>	<b>4</b>	<b>1</b>	<b>3</b>	<b>0</b>	<b>4</b>	<b>1</b>
Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>		Number of particles in 1 m <sup>3</sup>	
<b>171</b>	<b>14</b>	<b>138</b>	<b>21</b>	<b>113</b>	<b>14</b>	<b>148</b>	<b>21</b>


Measurement of the number of particles of determinate aerosol in air

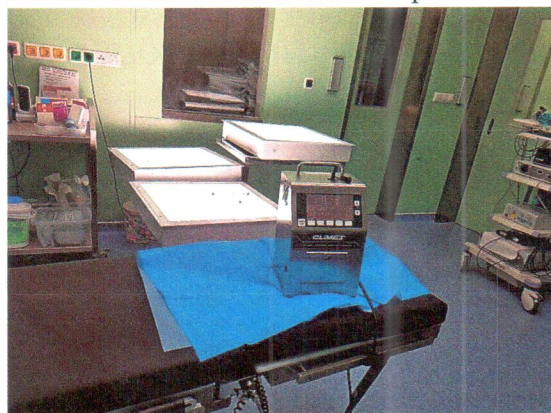

The Laboratory declares that all results apply to the given measurements only. This report shall not be reproduced, except in full, without the written approval of the technical head of laboratory.

Date: 8. 12. 2022

Prepared by and approved: Ing. Z. Mathauserová  
Technical head of Laboratory

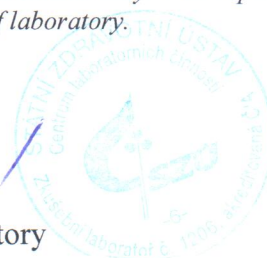

END OF TEST REPORT



## Statement on the Test Report No. 1.6/MKL/22/19

**Measurement of the number of particles of determinate aerosol in air for the purpose of verification of luminaires manufactured by VYRTYCH a.s. for clean rooms**

Expertise No.: EX 221361, SZÚ/15078/2022

Date of measurement: 3. – 4. 12. 2022

### CONCLUSION

Installed luminaires FILA-N-LED-2,21-OP-10000-236-4K, NORD-N-LED-CG-5100-236-G2-4K, NORD-N-LED-OPG-10000-236-G2-4K, BORDER-N-LED-SQ-OP-7000-4K, ODIS-LED-SQ-OP-7600-4K, HOOVER/3-LED-SQ-MP-7100-4K, HOOVER/3-LED-SQ-GLM-7100-4K, HOOVER4-LED-SQ-OP-6100-4K, HOOVER4-LED-SQ-MP-6100-4K, HOOVER4-LED-SQ-GLM-6100-4K, HOUND/3-MAG-LED-SQ-GLM-5100-4K, HOUND4-MAG-LED-SQ-GLM-5300-4K were not a source of pollution of clean room, during their operation did not release any solid aerosol particles into the clean room air. Due to its identical construction, used materials and the installation procedure into the ceiling of the clean room are recessed luminaires of the entire product type FILA-N-LED, NORD-N-LED, BORDER-N-LED, HOOVER/3-LED, HOOVER4-LED, HOUND/3-MAG-LED, HOUND4-MAG-LED, ODIS-LED suitable for use in all types of clean rooms.

8. 12. 2022

NATIONAL INSTITUTE OF PUBLIC HEALTH  
Centre of Occupational Health  
Šrobárova st. 48, 100 42 Prague 10  
Czech Republic  
Ing. Zuzana Mathauserová  
Technical head of the Laboratory